

---

# Mingo Custom Woods

---

2380 County Road K  
Colby, KS 67701  
(785)462-2200


## Installation For Magnetic Lock



Magnetic Key



Strike

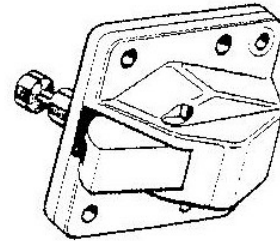

Lock

1. Locate two holes in box of cabinet opposite the hinges. Align the strike plate so that the holes match up with the holes on the box and attach with #4 x 1/2"L screws.
2. Locate the lock hole (9/32"Dia.) on the back of the door approximately centered in the door member opposite the hinges.
3. Place white shim over hole so that the stem of the lock can be inserted into the hole and place lock in position align the screw holes and attach with (2) #4 x 1/2"L screw (**Caution:** Be sure that you put the screws in the holes closest to the outside of the door as the inside screws are over the mirror.)
4. Check the locking mechanism with the lock to be sure it works properly before you close the door.

